




Asus X5511M-RCLN03 Battery Replacement

This guide will show how to remove the battery from the Asus X5511M-RCLN03.

Written By: Ryann Easterbrook

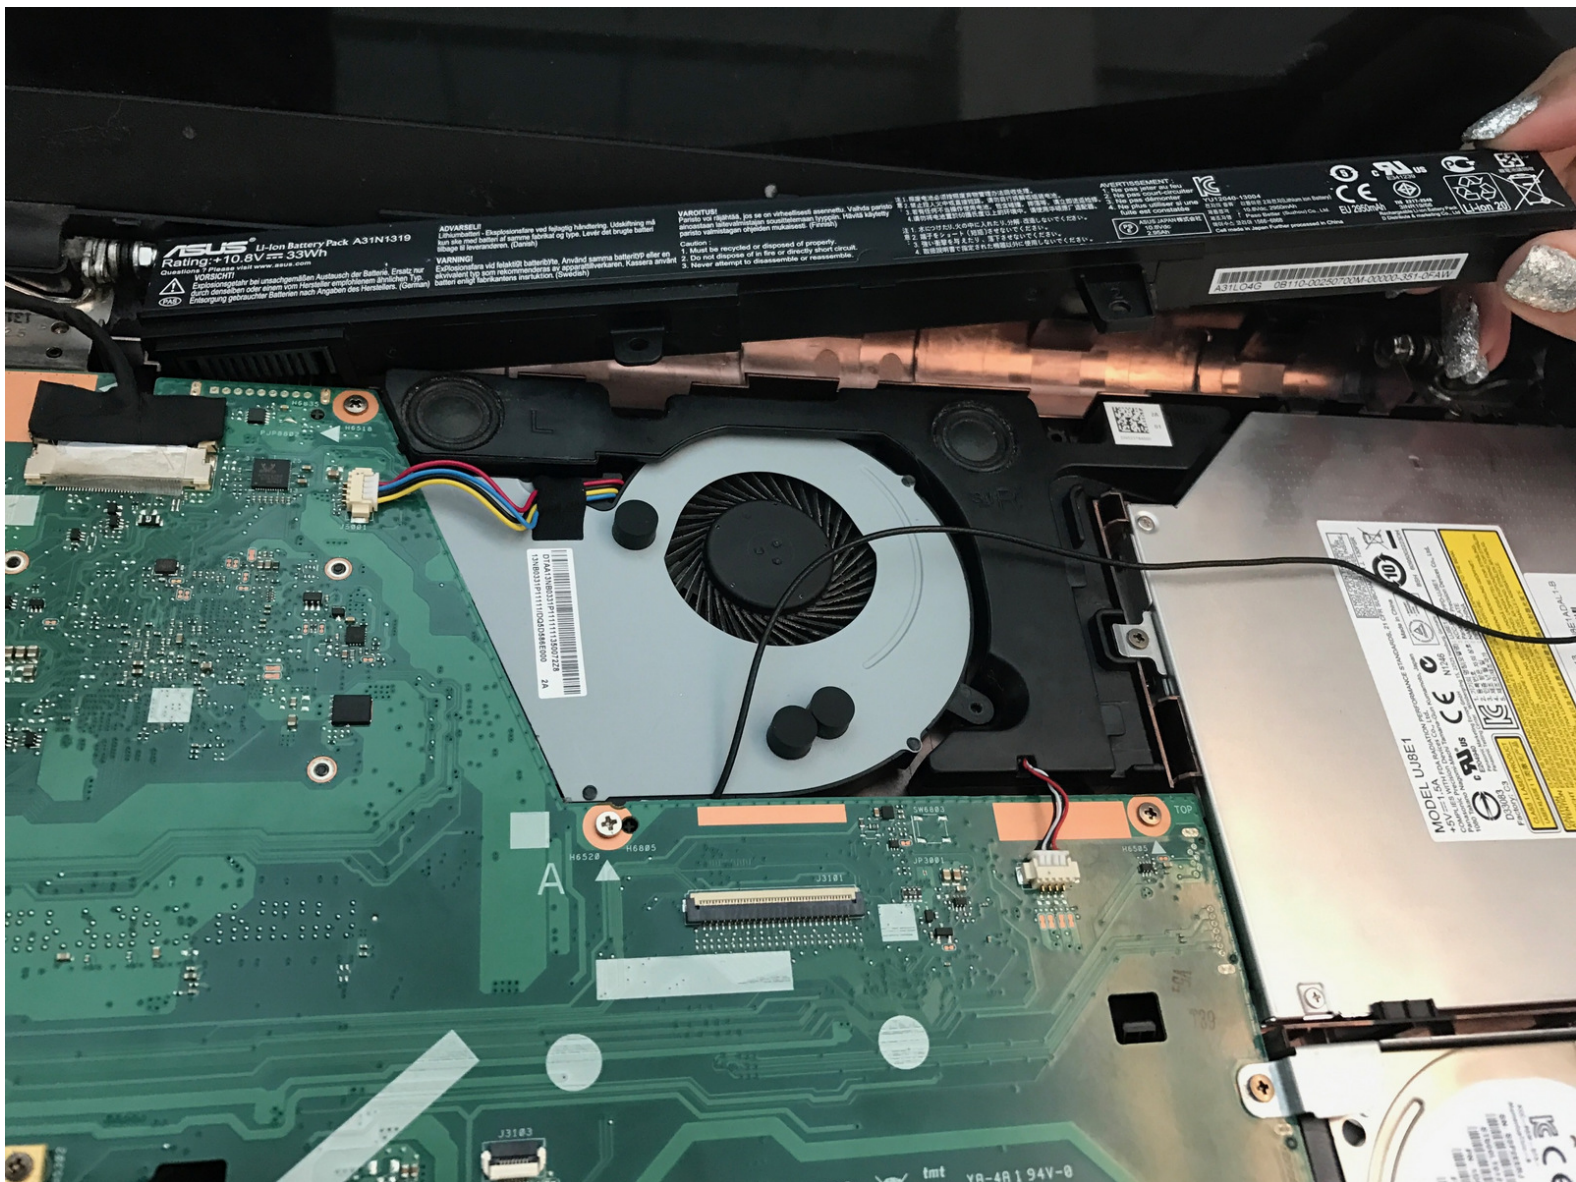

INTRODUCTION

In this guide, you will learn how to remove or replace the battery of your laptop.



TOOLS:


- [Heavy-Duty Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:


- [Replacement Battery](#) (1)
-

Step 1 — Battery

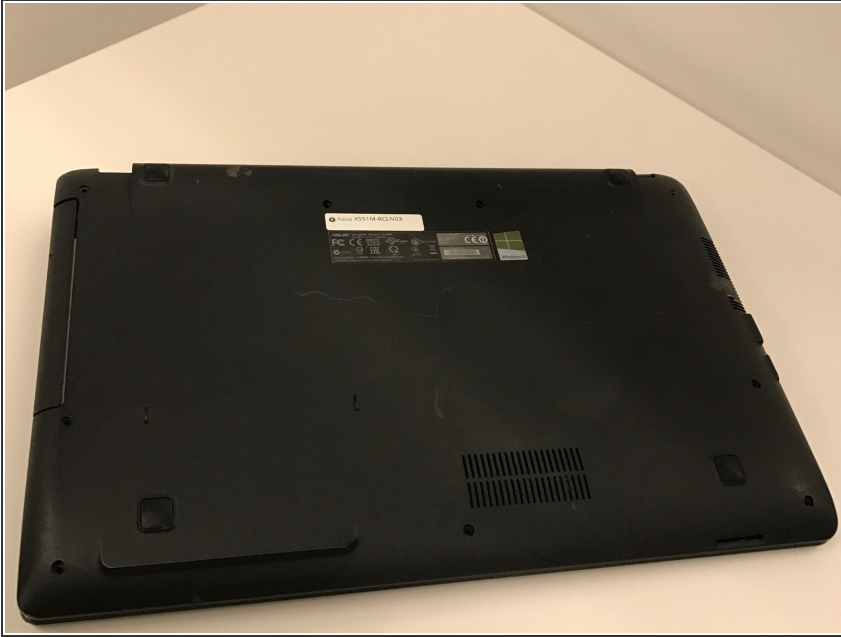


- Position the laptop with the back cover facing upward.

Step 2

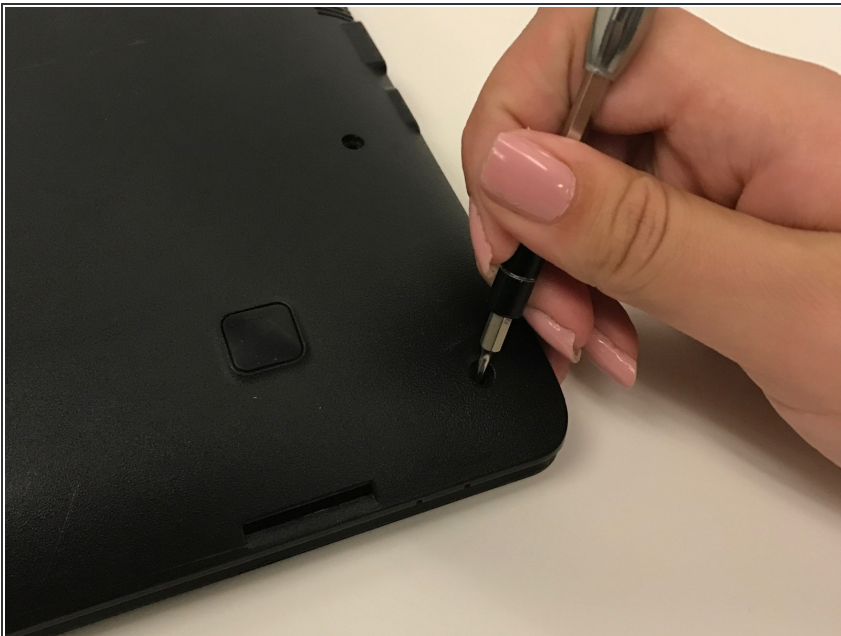


- Remove all 4 mm screws using a #00 Philip's screwdriver.

Step 3

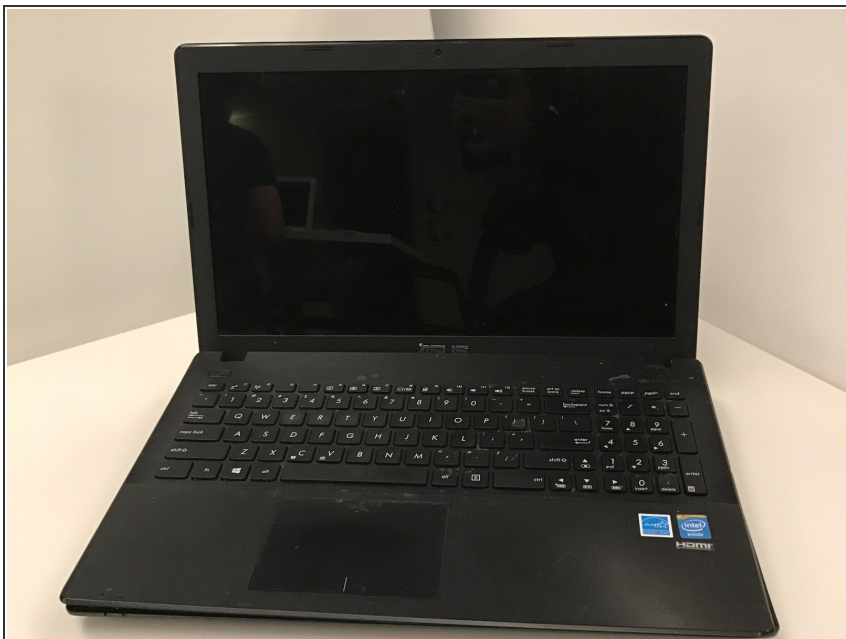

- Open the laptop with the keyboard facing upward.

Step 4

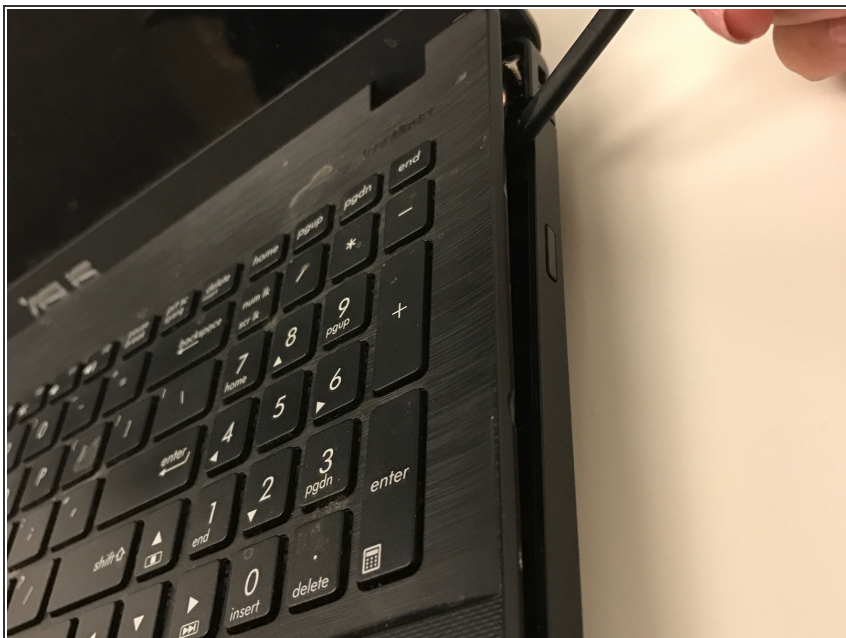

- Carefully pry up the keyboard cover with your fingers or with a plastic spudger.

Step 5



- Remove electrical ribbons by gently lifting up the tab that is holding them down, then pulling them gently.

Step 6



- Set the keyboard plate aside. Gently lift up battery to remove it.

To reassemble your device, follow these instructions in reverse order.

